

## ADD-ON OPTIONS

For Battery Powered Machine Skates



Select changes to functionality or chose additional components. Some features may require additional lead time.

	<p><b>Interchangeable or Independent Remotes</b></p> <p>Each remote control is set to the same frequency by default. This allows the user to swap between components for backup. If this option is selected, two or more remotes are programmed to independent frequencies, allowing the simultaneous operation of multiple skates instead.</p>	<p><b>Add-On Option: EP-Multi</b></p> <p>Change to Independent Frequency</p> <p><b>Available on: EP 5, 15 and 25</b></p>
	<p><b>Cable Remote (Disables Signal)</b></p> <p>Connector Cable. Turns wireless remote into wired pendant-type remote control and disables wireless signal for security sensitive sites. Easy connect/disconnect.</p>	<p><b>Add-On Option: EP-Cable 45</b></p> <p>45-Foot Cable</p> <p><b>Add-On Option: EP-Cable 195</b></p> <p>195-Foot Cable</p> <p><b>Available on: EP 15 and 25</b></p>
	<p><b>110V Powerpack</b></p> <p>Transformer with power cord. Powers machine skate via extension cord connected to 110V Outlet (or 220V). Requires 9 A under full load. Eliminates use of battery.</p>	<p><b>Add-On Option: EP-PPack</b></p> <p>Plug-In Power Pack</p> <p><b>Available on: EP 5, 15 and 25</b></p>
	<p><b>Storage Box</b></p> <p>Steel storage box. Allows charging of battery while stored.</p>	<p><b>Add-On Option: EP-Box</b></p> <p>Storage Box</p> <p><b>Available on: EP 5, 15 and 25</b></p>
	<p><b>Additional / Replacement Battery</b></p> <p>Additional / replacement battery.</p>	<p><b>Add-On Option: EP-Battery</b></p> <p>Extra Battery</p> <p><b>Available on: EP 5, 15 and 25</b></p>