

# Electric Powered Machine Skate

## Quick Start Guide

Included in box:



**Electric Powered  
Skate with Battery**



**Remote Control  
with Charger**



**Battery Charging Unit**


Tip: Disconnect skate (red) from battery (silver) for transport.



# Quick Start Guide


## Charging the Battery

1. Turn the switch on the charger to OFF (D)
2. Connect the charger to the battery compartment and plug into a 110V Outlet.

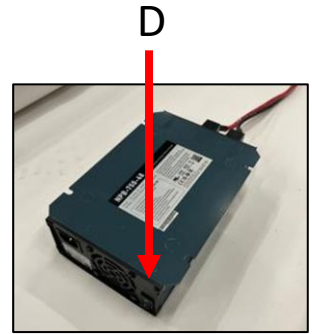

3. Turn the main switch on the battery to ON (A)


Blue light (B) blinks to indicate charging in progress.  
SOC (C) shows level of charge.

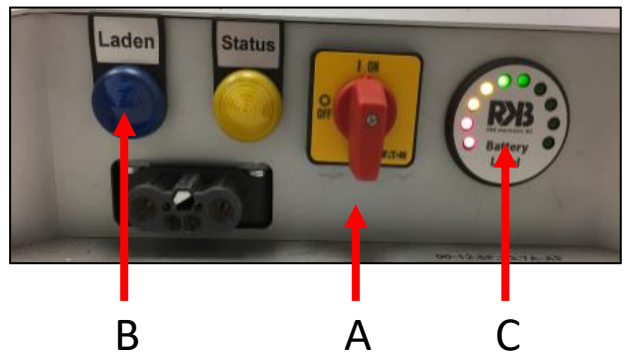

4. Turn the switch on the charger to ON (D)

## Charging Remote

1. Open the battery compartment (bottom of remote control) and remove the battery
2. Insert the battery into the charger
3. Plug the charger in to a 110 V Outlet

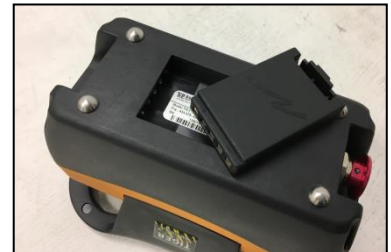

A full charge will require approx. 3 hours.

### Indicators on charger

- Red: Charging (Needs additional charge)
- Green: Fully charged



# Quick Start Guide

## Start-up Skate

1. Turn unit ON



## Turn ON remote

1. Pull Red "Stop" button. This turns the remote ON.



2. The display on the remote will now guide you through the next steps.



3. Push the two buttons on the right simultaneously. (This will activate the connection with the dolly).




4. The dolly is still locked from movement for safety. Press the left button to unlock. The system is now ready to move.



# Quick Start Guide

## Drive Controls

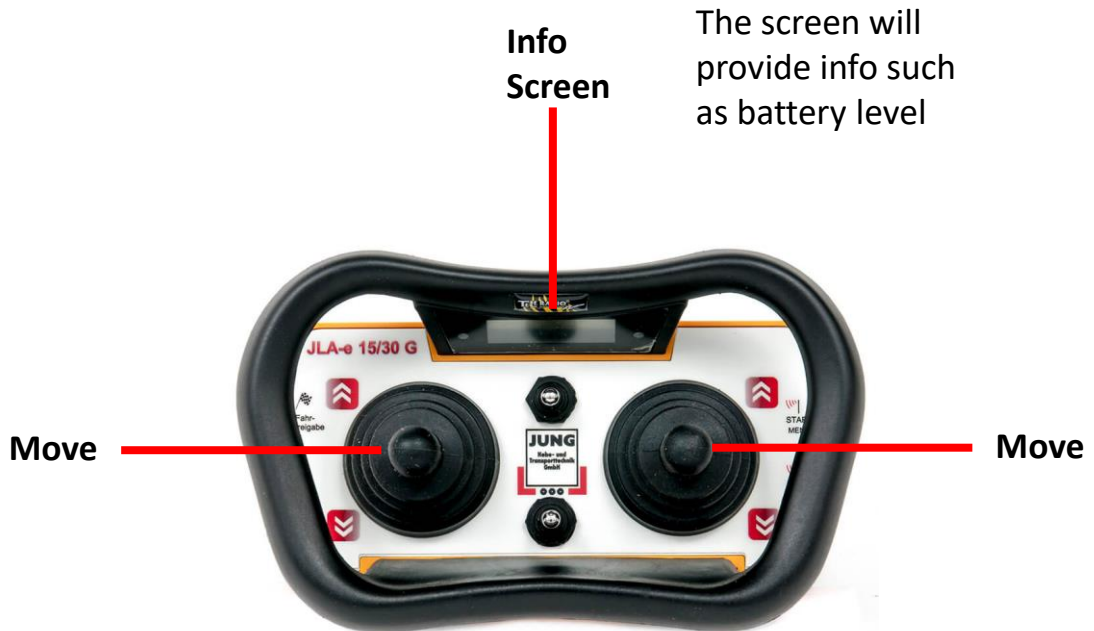

The joysticks provide motion control:

- Forward
- Reverse
- Turn & Rotate 360 degrees
- Speed Control



# Quick Start Guide

## Indicators on Battery compartment

- The yellow light indicates that unit is ON (light on) or OFF (light off).
- A signal tone will emit indicating the charging process is starting.
- The blue light will turn ON indicating that the charge is in progress.

Alternating blinking of Blue and Yellow light with a simultaneous signal tone indicates a full charge.



- The SOC (Status of Charge) indicator will show the level of charge. Red 10-20%. Yellow 30-40%. Green 50-100% charged.



## LED Indicators on charger

- Orange: Charging in progress
- Green: Battery is fully charged
- Red: Something is wrong



Powered by **non-  
flammable**  
Lithium-Ion Batteries



Will **NOT** burn or  
explode

# IMPORTANT

Do **not** let Battery drain to  
Zero

\*\*\*\*\*

The battery must be  
charged once every 3  
months or the batteries  
may suffer permanent  
damage.

\*\*\*\*\*