


BÖRKEY ROLLER


Dimensions of Guiding Casters

All dimensions in inches

Model size #1-3v

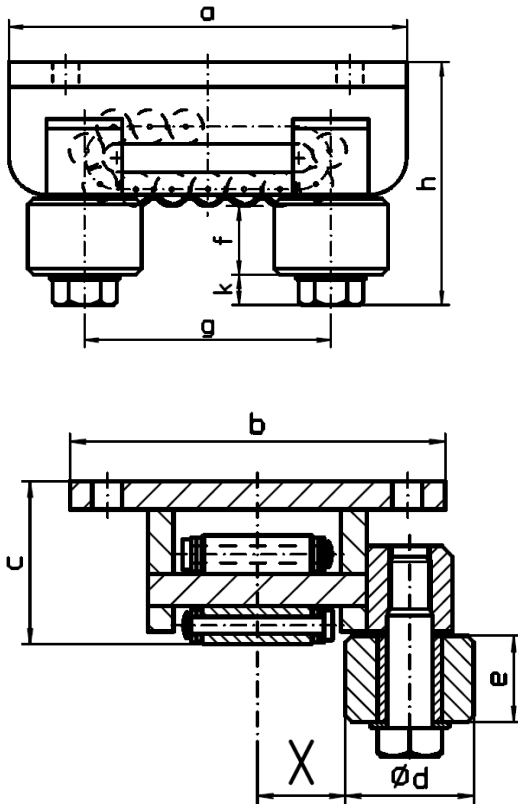

Model size #4-6

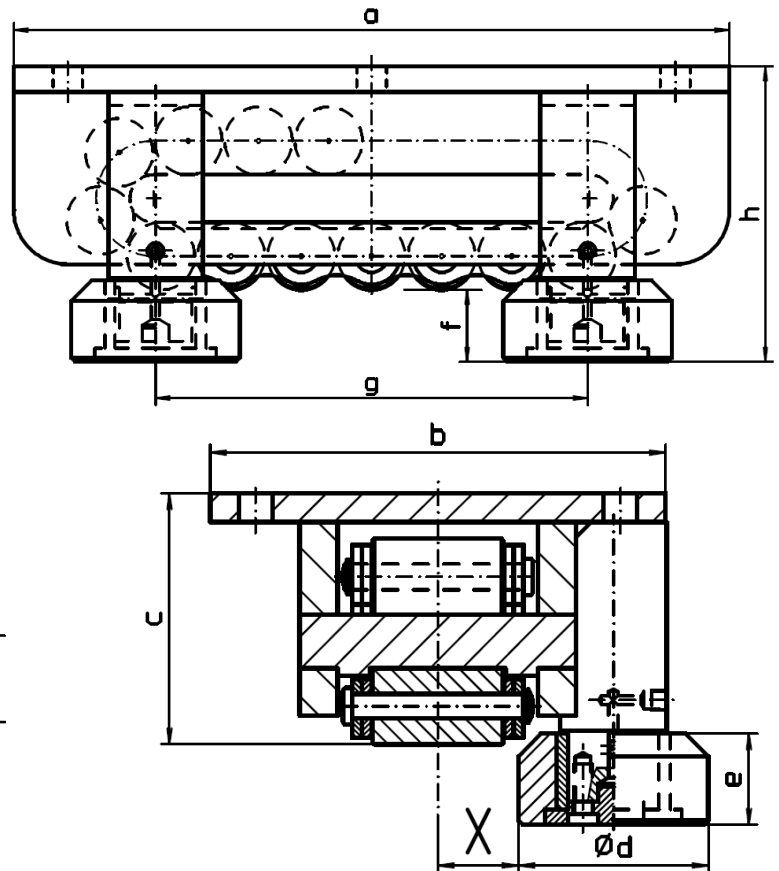

All dimensions in inches

Model size	a	b	c	Ø d	e	f	g	h	k	X min	X max
#1	8.3	6.9	3.0	2.4	1.6	1.4	5.1	5.0	0.6	1.4	3.1
#2	8.7	7.5	3.4	2.4	1.6	1.4	5.5	5.3	0.6	1.6	3.5
#3	10.6	8.3	4.1	2.4	1.6	1.4	7.1	6.0	0.6	2.0	4.3
#3v	12.6	8.7	4.5	2.4	1.6	1.4	9.0	6.4	0.6	2.2	4.5
#4	15.0	10.6	5.7	4.9	2.4	2.0	6.3	7.7	-	1.8	5.9
#5	20.9	11.8	6.5	4.9	2.4	2.0	11.0	8.5	-	2.0	6.3
#5L	22.8	11.8	6.7	4.9	2.4	2.0	13.4	8.7	-	2.0	6.3
#5v	25.6	13.8	7.5	6.7	2.4	2.0	13.4	9.4	-	2.0	6.7
#6	35.4	15.0	7.9	6.7	2.4	2.0	21.6	9.8	-	2.0	6.7